SONY

Internet TV

Quick Setup Guide

PLEASE READ END USER LISENSE AGREEMENT BEFORE USING THIS PRODUCT

Printed in China
© 2010 Sony Corporation
4-196-879-**13** (1)

NSZ-GT1

Preparation

In the Box

- ☐ Internet TV Box (1)
- ☐ Keypad (1)
- ☐ Size AA batteries (2)
- ☐ HDMI cable (1)

- ☐ IR Blaster cable (1)

- ☐ AC power cord (1)

- ☐ AC adapter (1)
- ☐ Quick Setup Guide (1)
- ☐ Reference Guide (1)
- ☐ Warranty card (1)
- ☐ End User License Agreement (1)

Inserting batteries



AA-size (R6)

Connection

step 1 Connect the Internet TV Box

Connect the unit between the TV and Cable/Satellite Box using the HDMI cable.

To use an AV Receiver
Connect the unit to an AV Receiver instead of the TV using the HDMI cable.

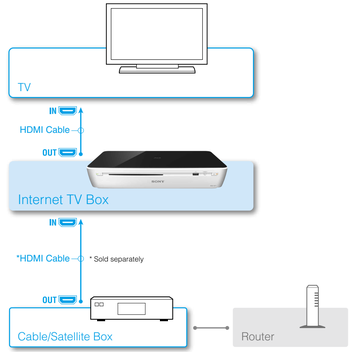

step 2 Connect the IR Blaster

Connect the IR Blaster to control the Cable/Satellite Box.
Place the IR Blaster near the remote sensor of the Cable/Satellite Box.

To use an AV Receiver
You can control an AV Receiver by connecting the IR Blaster to it.

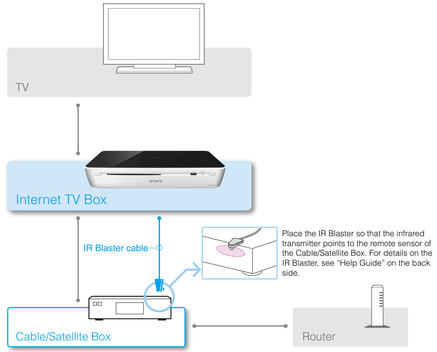
TV
Internet TV Box
IR Blaster cable
Place the IR Blaster so that the infrared transmitter points to the remote sensor of the Cable/Satellite Box. For details on the IR Blaster, see “Help Guide” on the back side.
Cable/Satellite Box
Router

- You can control a Cable/Satellite Box via the Home Network depending on your Cable/Satellite TV provider. For details, see “Help Guide” on the back side.

step 3 Connect to a network

When using wired connection, connect the unit and a router with a LAN cable. When using wireless connection, you need to set the Network Setup in the Initial Setup Wizard (on step 7).

- For details on making a network connection with the Cable/Satellite Box, see the operating instructions supplied with the Cable/Satellite Box.

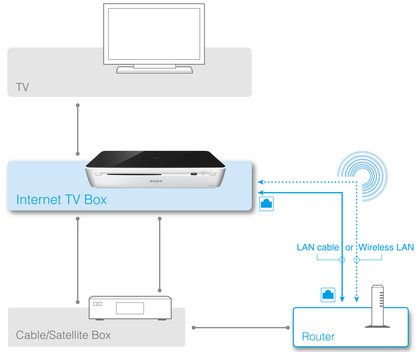

Note If your connection method differs from that shown above, see “Help Guide” on the back side.

step 4 Connect to the power source

Connect the AC adapter and AC power cord to the unit and wall outlet.

step 5 Change the TV input

Switch the input selector on the TV so that the signal from the unit appears the your TV screen.

step 6 Press the I / ⏻ (on/standby) button

step 7 Start Internet TV Box setup

Follow the directions of the Initial Setup Wizard displayed on the screen.

- **When you skip the Network Setup, only limited functions will be available with the unit.**
- The screen may stay dark for several seconds after the Sony logo disappears. Wait for a while until the Initial Setup Wizard is displayed.
- It takes about 15 minutes to complete the Initial Setup.

* This illustration may differ from the actual display.

Keypad

A OPTICAL FINGER SENSOR (OFS)
Allows you to control the pointer with just your thumb.
To operate the pointer, slide your thumb on the OFS.
To click, press down on the OFS.

B SCROLL
Scrolls a page or list.
Hold down SCROLL and slide your thumb up and down on the OFS.

C ZOOM
Zooms images.
Hold down ZOOM and slide your thumb up and down on the OFS.

To drag and drop
Hold down SCROLL and ZOOM, and slide your thumb on the OFS.

* You can use the scroll, zoom, and drag and drop operations only when you are launching compatible applications or browsing web sites.

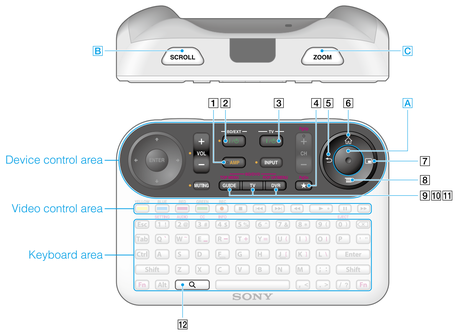

* You can control the AV Receiver with the following keys when you have finished the AV Receiver Setup in the Initial Setup Wizard: I / ⏻ (BD/EXT), INPUT, VOL, MUTING

**You can control the TV with the following keys when you have finished the TV Control Setup in the Initial Setup Wizard: I / ⏻ (TV), INPUT, VOL, MUTING

1 AMP AMP*
Allows you to control the connected AV Receiver.
Keys beside orange markers are active when the AMP indicator is on.

2 I / ⏻ ON/STANDBY (BD/EXT)
Turns on the unit.

3 I / ⏻ ON/STANDBY (TV)**
Turns on the TV.

4 ★ BOOKMARK
Bookmarks your favorite content.

5 ⮌ BACK
Returns to the previous display.

6 ⌂ HOME
Displays the HOME menu.
The HOME menu is a gateway to various contents.

7 WINDOW
Switches the window style.

8 MENU
Displays menu items according to applications.

9 GUIDE GUIDE
Displays the TV Guide.

10 TV TV
Displays live TV.

11 DVR DVR
Displays the DVR (Digital Video Recorder) menu.

12 SEARCH
Displays the Quick Search Box.
Type your interest in the Quick Search Box, and the unit will suggest contents from various media.

Help Guide

Find out more about the Internet TV Box

The Help Guide gives you detailed information on how to use the Internet TV Box as follows:
– Basics of the Internet TV Box
– How to use applications
– Details on how to use the Keypad
– Customizing settings
– Software Updates

To launch the Help Guide

- **From your Internet TV Box**
  Select "Help Guide" from the Applications List.

  Or, press Q(SEARCH) and type "help" in the Quick Search Box.
  Help Guide appears in the search results.
  • The network connection is required for accessing the "Help Guide" from the unit.

- **From a PC browser**
  Access the following:

  http://esupport.sony.com/internettv/helpguide/

Troubleshooting

Before starting the Initial Setup Wizard

Check the following so that the Initial Setup Wizard operations go smoothly.

- **Network connection**
  – Check whether your home network is a wired or wireless connection.

  If Wireless LAN is used
  – Check whether the wireless access point device such as a Wireless LAN router supports Wi-Fi Protected Setup (WPS). If WPS is not supported, you will need to make a connection manually.
  – Check whether the Push or PIN method is used for WPS.
  – Check your SSID and Password if setting up the wireless connection manually.

- **Account**
  – Check your ID and Password for your Google Account*.
  * You can create a new account in the Initial Setup Wizard.

- **Cable/Satellite Box**
  – Check the Cable/Satellite TV provider name.

- **IR Blaster**
  – Check the manufacturer name of the device to be connected with the IR Blaster.

- **TV Control**
  – Check your TV manufacturer name.

Before connecting with a Wireless LAN

Check the following to ensure that the Wireless LAN connection can be made.
• Depending on the surrounding environment, such as the wall material, radio wave receiving condition, or obstacles between this unit and the wireless LAN router, the communication distance may be shortened. Move the unit and the wireless LAN router closer to each other.
• Devices that use a 2.4 GHz frequency band, such as a microwave, Bluetooth, or digital cordless device, may interrupt the communication. Move the unit away from such devices, or turn off such devices.

Frequently-asked questions (FAQ)

There is no picture (screen is dark).

• Make sure that the AC power cord is securely connected.
• Make sure that all the connecting cables are securely connected. (Especially, make sure HDMI IN and OUT are correctly connected.)
• Switch the input selector on the TV to display the signal from this unit.
• Make sure that the Power indicator is lit up green.
• Try the following: ①Turn the unit off and on again. ②Turn the connected device off and on again. ③Disconnect and reconnect the HDMI cable.
• The HDMI OUT jack is connected to a DVI device that does not support copyright protection technology.

The Keypad does not function.

• Operate the Keypad closer to the unit.
• Make sure that the batteries are inserted correctly.
• Hold down the Fn and Enter keys following the instructions on the screen until the pairing screen disappears.
• Hold down I / ⏻ on the unit for more than 5 seconds until the Power indicator turns red (the unit turns off). If the unit still does not respond to any button, disconnect then reconnect the AC power cord.

The unit cannot connect to the Internet.

• Make sure that the LAN router or Wireless LAN router is on.
• Check the settings of the LAN router or Wireless LAN router. For details, see the operating instructions supplied with the LAN router or Wireless LAN router.
• Make sure that the LAN cable is connected correctly when using a wired network connection.
• Check your network environment as noted in "Before connecting with a Wireless LAN" when using a wireless network connection.

The unit cannot connect to the Internet after "Wi-Fi Protected Setup (WPS)" is finished.

• The wireless setting of the router may change automatically if you have used the WPS function before. In this case, change the wireless settings of your PC accordingly.

For more information about the Internet TV.

• Access the Help Guide.

Additional Information

Parts and controls

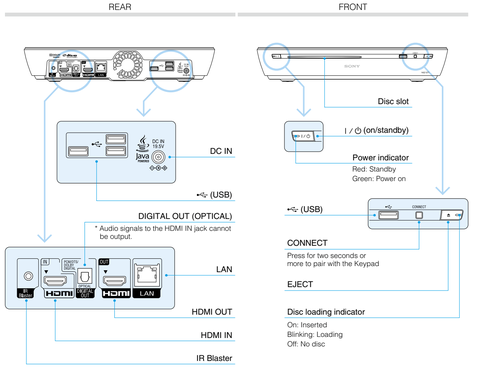

* Audio signals to the HDMI IN jack cannot be output.

CONNECT
Press for two seconds or more to pair with the Keypad

Sony Customer Support

www.sony.com/internettvsupport United States 1.800.222.SONY
Please Do Not Return the Product to the Store